Quick Set Up Guide

Your new Kitchen TV is supplied with screws and fixings to allow you to mount the system underneath a kitchen cupboard or directly onto a wall.
This is a very simple procedure, but it is important that this is done correctly to ensure that the TV is mounted safely with space for the cables to be connected

1. Under Cupboard Installation

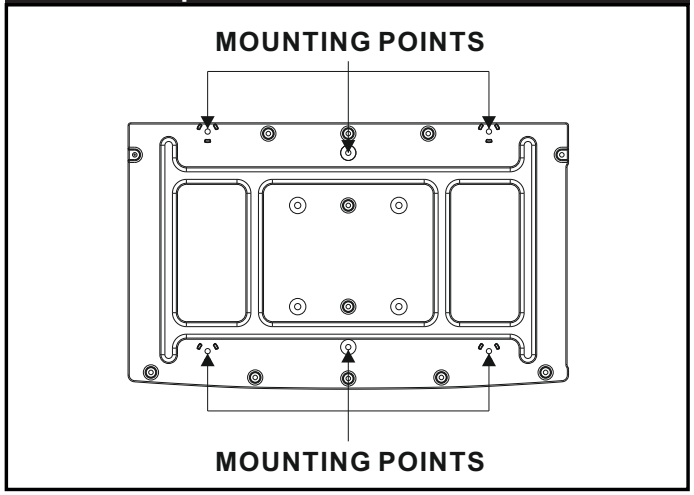

1) Open the LCD screen and remove the 6 mounting point hole covers. Offer the unit to the underside of the kitchen cupboard at the desired location. Whilst holding the unit in place, mark the 6 mounting points through the mounting point holes.
   AT THIS POINT PLEASE ENSURE THERE IS ENOUGH SPACE TO CONNECT CABLES.

2) Remove the Kitchen TV and pilot drill the marked holes, using a 3mm bit to a depth no greater than the thickness of the wood.

3) Attach the Kitchen TV to the underside of the cupboard using the 6 screws provided, taking care that the screws to do NOT penetrate inside the cupboard itself.

4) Replace the 6 mounting point hole covers.

2. Wall Mounting VESA Installation

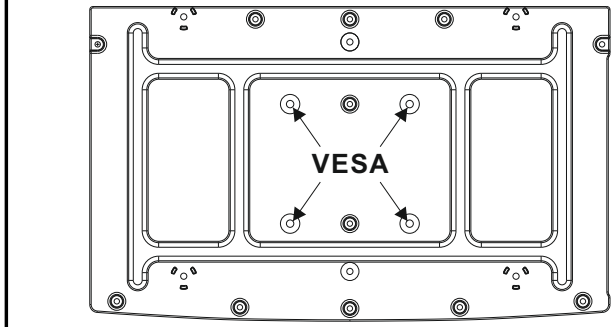

1) Install the VESA mount (not supplied) to the wall, following the manufacturers guidelines.

2) Open the LCD screen to reveal the 4 VESA mounting points, as shown above.

3) Using the 4 nuts and bolt fittings provided with your VESA mount attach the Kitchen TV to the VESA mount.

   NOTE: When mounting the Kitchen TV to a wall the internal speakers are concealed and as a result the performance of the audio output may be affected.

Please see overleaf for channel installation and aerial connection details.

SOVOS

Quick Set Up Guide

Once the TV is securely mounted you can add the power and aerial cables.

3. Power and aerial connections

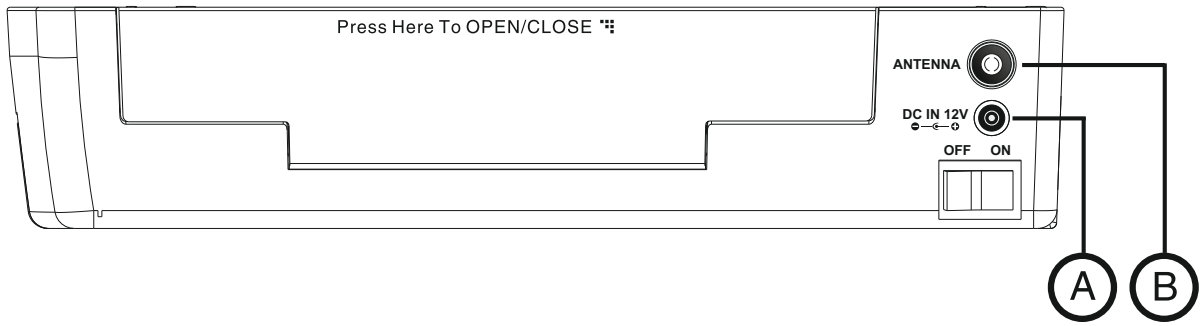

Insert the 12V DC cable from the supplied adaptor at point A.

Insert your aerial cable (coaxial) at point B.

Once the correct cables are in place flick the power switch to ‘ON’.
The TV will automatically display the channel setup menu for the first time installation.
Simply press ‘OK’ on the remote control and the TV will find and store all your local TV channels.
As the power consumed in standby mode is less than 2 Watts, simply use the remote control to turn the product off/on in the future.

See the USER MANUAL for more details.

If you require assistance please call our Technical Support Centre on: 02920 866 429

SOVOS